

CATERPILLAR*



REPLACEMENT PARTS FOR CATERPILLAR* DIESEL ENGINES

PART NO.*	DESCRIPTION*
DP-105-2508	PUMP, PRIMING
DP-108-2104	PLUNGER & BARREL
DP-108-6630	PLUNGER & BARREL
DP-108-6631	PLUNGER & BARREL
DP-5B3718	O'RING
DP-9B1320	CHECK VALVE
DP-9B1363	SPRING
DP-8C4452	FUEL PUMP GASKET KIT 3406
DP-8C5790	FUEL PUMP GASKET KIT 3306,3306B
DP-8C6538	FUEL PUMP GASKET KIT 3406B
DP-8C6772	FUEL PUMP GASKET KIT 3406B
DP-8C8490	FUEL PUMP GASKET KIT 3406B
DP-8C8764	FUEL PUMP GASKET KIT 3406B
DP-7E3969	NOZZLE PENCIL
DP-7E5346	INSERT
DP-7E6006	PUMP, FUEL
DP-7E6007	USE 108-2104
DP-5F2805	USE 9F2393
DP-6F1069	SEAL RING
DP-9F2393	SERVICE GROUP
DP-9F4113	NOZZLE
DP-5H5836	NOZZLE
DP-5H7936	SERVICE GROUP
DP-6H3364	SERVICE GROUP
DP-9H2256	PUMP, PRIMING
DP-9H5746	CHECK VALVE
DP-9H5796	BARREL & PLUNGER
DP-9H5797	BARREL & PLUNGER
DP-9L6863	TRANSFER PUM 3306
DP-9L6884	D/F NOZZLE
DP-9L6969	PENCIL NOZZLE
DP-9L7883	USE 9N2366
DP-5M4086	NOZZLE
DP-7M4190	NOZZLE
DP-7M4601	NOZZLE
DP-7M7431	SERVICE GROUP
DP-8M1584	SERVICE GROUP
DP-8M2667	PUMP, FUEL
DP-8M2701	USE 2S7264
DP-8M2899	USE 1P3409
DP-8M3279	PUMP, FUEL
DP-8M3280	PUMP, FUEL
DP-8M9753	PUMP, FUEL
DP-8M9754	PUMP, FUEL
DP-8M9755	PUMP, FUEL
DP-8M9757	PUMP, FUEL
DP-8M9758	PUMP, FUEL
DP-8M9760	PUMP, FUEL
DP-8M9761	PUMP, FUEL
DP-9M0444	PUMP, FUEL

PART NO.*	DESCRIPTION*
DP-3N0972	SERVICE GROUP
DP-3N1299	NOZZLE
DP-4N0360	USE 3T8706
DP-4N0406	GEAR 3208
DP-4N0429	GEAR 3208
DP-4N1132	PUMP HOUSING 3208
DP-4N1251	NOZZLE
DP-4N2728	RETAINER
DP-4N2773	TACH SHAFT 3208
DP-4N2954	DRIVE HUB
DP-4N4318	USE 9N5862
DP-4N4997	BARREL & PLUNGER
DP-6N1043	PUMP, FUEL
DP-6N1133	FUEL PUMP GASKET 3306
DP-6N2766	BARREL & PLUNGER
DP-6N2767	PUMP, FUEL
DP-6N3723	FUEL PUMP GASKET 3208
DP-6N7527	BARREL & PLUNGER
DP-6N7828	USE 7W0182
DP-7N0449	PENCIL NOZZLE
DP-7N1183	BARREL & PLUNGER
DP-7N1185	BARREL & PLUNGER
DP-7N1219	PUMP, FUEL
DP-7N1220	BARREL & PLUNGER
DP-7N5005	USE 8N1831
DP-7N9843	NOZZLE
DP-8N1831	NOZZLE
DP-8N2478	USE 7N9843
DP-8N3173	NOZZLE
DP-8N3174	NOZZLE
DP-8N3175	NOZZLE
DP-8N3176	NOZZLE
DP-8N3177	NOZZLE
DP-8N3178	USE 6H3364
DP-8N3539	BARREL & PLUNGER
DP-8N3945	BUSHING 3208
DP-8N3946	GOV. HOUSING 3208
DP-8N4694	NOZZLE
DP-8N4697	NOZZLE
DP-8N5986	USE 3S6638
DP-8N7005	NOZZLE ASSEMBLY
DP-8N8796	SERVICE GROUP
DP-9N0194	USE 3T8705
DP-9N2366	PENCIL NOZZLE
DP-9N2845	NOZZLE
DP-9N3246	D/F NOZZLE
DP-9N3299	PENCIL NOZZLE
DP-9N3979	USE 1W5829
DP-9N5862	SPRING
DP-9N6173	NOZZLE
DP-1P1098	SERVICE GROUP

PART NO.*	DESCRIPTION*
DP-1P2298	USE 7E5346
DP-1P3409	PUMP, FUEL
DP-1P6400	BARREL & PLUNGER
DP-1P7324	USE 3T9562
DP-5P4810	USE 7W6335
DP-5P8062	FUEL PUMP GASKET KIT 3406
DP-5P8214	FUEL PUMP GASKET KIT 3406
DP-5P8329	FUEL PUMP GASKET KIT 3406
DP-5P8391	FUEL PUMP GASKET KIT 3406
DP-5P8982	FUEL PUMP GASKET KIT D353
DP-5P9148	FUEL PUMP GASKET KIT 3406
DP-5P9216	FUEL PUMP GASKET KIT 3208
DP-5P9338	FUEL PUMP GASKET KIT 1674
DP-5P9339	FUEL PUMP GASKET KIT D334
DP-5P9390	FUEL PUMP GASKET KIT 1140, 1145
DP-5P9397	FUEL PUMP GASKET KIT 3160
DP-5P9419	FUEL PUMP GASKET KIT D4
DP-5P9461	FUEL PUMP GASKET KIT 3304, 3306
DP-5P9556	FUEL PUMP GASKET KIT D342
DP-5P9581	FUEL PUMP GASKET KIT 1673
DP-5P9833	FUEL PUMP GASKET KIT D8
DP-5P9835	FUEL PUMP GASKET KIT D8
DP-5P9859	FUEL PUMP GASKET KIT 3408
DP-5P9948	FUEL PUMP GASKET KIT 910
DP-1S9410	PUMP, FUEL
DP-2S1631	CHECK VALVE
DP-2S4442	NOZZLE
DP-2S7264	PUMP, FUEL
DP-2S9828	NOZZLE
DP-3S1467	PUMP, FUEL
DP-3S6638	SERVICE GROUP
DP-3S8336	BARREL & PLUNGER
DP-4S5758	BARREL & PLUNGER
DP-4S7913	BARREL & PLUNGER
DP-7S1059	USE 8N1831
DP-7S5105	NOZZLE
DP-7S6681	BARREL & PLUNGER
DP-7S8722	NOZZLE
DP-7S9891	SERVICE GROUP
DP-8S3656	BARREL & PLUNGER
DP-3T8705	GLOW PLUG
DP-3T8706	GLOW PLUG
DP-3T9562	GLOW PLUG
DP-8T1615	FUEL PUMP GASKET KIT D348
DP-8T1624	FUEL PUMP GASKET KIT 3306
DP-8T1635	FUEL PUMP GASKET KIT 3208
DP-8T1636	FUEL PUMP GASKET KIT 3406
DP-8T1653	FUEL PUMP GASKET KIT 3306B
DP-8T2470	FUEL PUMP GASKET KIT 3204
DP-8T6692	FUEL PUMP GASKET KIT 9103406B
DP-8T6734	FUEL PUMP GASKET KIT 931, D3, D4

PART NO.*	DESCRIPTION*
DP-8T7539	FUEL PUMP GASKET KIT 3306B
DP-8T7562	FUEL PUMP GASKET KIT 3306B
DP-8T9081	FUEL PUMP GASKET KIT 3406B
DP-6V0241	FUEL PUMP GASKET KIT 3408
DP-6V0623	FUEL PUMP GASKET KIT 3304, 3306
DP-6V0908	FUEL PUMP GASKET KIT D333
DP-6V1667	FUEL PUMP GASKET KIT D353
DP-6V1692	FUEL PUMP GASKET KIT D353
DP-6V1848	FUEL PUMP GASKET KIT 3406
DP-6V1980	FUEL PUMP GASKET KIT 3306
DP-6V1981	FUEL PUMP GASKET KIT 3306
DP-6V2245	FUEL PUMP GASKET KIT D4
DP-6V2251	FUEL PUMP GASKET KIT 3304, 3306
DP-6V2354	FUEL PUMP GASKET KIT 3306
DP-6V2414	FUEL PUMP GASKET KIT D5, D6, D7
DP-6V2547	FUEL PUMP GASKET KIT 3412
DP-6V2901	FUEL PUMP GASKET KIT 3304, 3306
DP-6V2909	FUEL PUMP GASKET KIT 3208
DP-6V2941	FUEL PUMP GASKET KIT D353
DP-6V2959	FUEL PUMP GASKET KIT D353
DP-6V2960	FUEL PUMP GASKET KIT D353
DP-6V2972	FUEL PUMP GASKET KIT D5, D6, D7
DP-6V3726	FUEL PUMP GASKET KIT D349
DP-6V3729	FUEL PUMP GASKET KIT D4, D5
DP-6V3742	FUEL PUMP GASKET KIT D379, D398
DP-6V4573	FUEL PUMP GASKET KIT D349
DP-6V4574	FUEL PUMP GASKET KIT D349
DP-6V4707	FUEL PUMP GASKET KIT 3306
DP-6V4720	FUEL PUMP GASKET KIT 953
DP-6V4756	FUEL PUMP GASKET KIT D342
DP-6V4770	FUEL PUMP GASKET KIT D342, 3306B
DP-6V4780	FUEL PUMP GASKET KIT 3304
DP-6V4788	FUEL PUMP GASKET KIT 3306
DP-6V5425	FUEL PUMP GASKET KIT G379
DP-6V5455	FUEL PUMP GASKET KIT D379, 3398
DP-6V5459	FUEL PUMP GASKET KIT D379, D398
DP-6V5467	FUEL PUMP GASKET KIT D379, D398
DP-6V5494	FUEL PUMP GASKET KIT D379
DP-6V5497	FUEL PUMP GASKET KIT 3406
DP-6V6367	FUEL PUMP GASKET KIT 1693
DP-6V6368	FUEL PUMP GASKET KIT 1693
DP-6V6369	FUEL PUMP GASKET KIT 1693
DP-6V7429	FUEL PUMP GASKET KIT D398
DP-6V7461	FUEL PUMP GASKET KIT 3304
DP-6V8028	FUEL PUMP GASKET KIT 637D
DP-6V8042	FUEL PUMP GASKET KIT 140G, 3306
DP-6V8575	FUEL PUMP GASKET KIT 1676, D336
DP-6V8908	FUEL PUMP GASKET KIT 936
DP-6V9223	FUEL PUMP GASKET KIT 3406B, 825C
DP-6V9245	FUEL PUMP GASKET KIT 3406
DP-6V9701	FUEL PUMP GASKET KIT D399

PART NO.*	DESCRIPTION*
DP-6V9710	FUEL PUMP GASKET KIT D399
DP-6V9711	FUEL PUMP GASKET KIT D399
DP-6V9715	FUEL PUMP GASKET KIT 3406
DP-6V9725	FUEL PUMP GASKET KIT 3406B
DP-6V9882	FUEL PUMP GASKET KIT 3204
DP-6V9894	FUEL PUMP GASKET KIT 3406B
DP-6V9908	FUEL PUMP GASKET KIT 312G, 3306B
DP-1W3010	BARREL & PLUNGER
DP-1W5829	PENCIL NOZZLE
DP-1W6539	BARREL & PLUNGER
DP-1W6541	BARREL & PLUNGER
DP-2W2604	PRIMING PUMP
DP-2W2605	PRIMING PUMP
DP-2W3413	USE 108-6630
DP-2W3414	USE 108-6631
DP-4W0788	USE 105-2508
DP-4W1819	PENCIL NOZZLE
DP-4W7015	NOZZLE ASSEMBLY
DP-4W7016	NOZZLE ASSEMBLY
DP-4W7017	NOZZLE ASSEMBLY
DP-4W7018	NOZZLE ASSEMBLY
DP-4W7019	NOZZLE ASSEMBLY
DP-4W8483	PENCIL NOZZLE
DP-7W0182	BARREL & PLUNGER
DP-7W3710	PENCIL NOZZLE
DP-7W5928	BARREL & PLUNGER
DP-7W5929	BARREL & PLUNGER
DP-7W6335	CAMSHAFT BUSHING 3208
DP-7W7026	NOZZLE ASSEMBLY
DP-7W7030	NOZZLE ASSEMBLY
DP-7W7032	NOZZLE ASSEMBLY
DP-7W7037	NOZZLE ASSEMBLY
DP-7W8120	NOZZLE ASSEMBLY
DP-7X0852	FUEL PUMP GASKET KIT 3406B
DP-7X2633	FUEL PUMP GASKET KIT 3406B
DP-7X2754	FUEL PUMP GASKET KIT 3406B
DP-7X7969	FUEL PUMP GASKET KIT 245B, 3406B
DP-7X7971	FUEL PUMP GASKET KIT 3176
DP-9X2519	FUEL PUMP GASKET KIT 3306B
DP-9X6388	FUEL PUMP GASKET KIT 3208
OVERHAUL KIT FOR 3208 CAT* ENGINES	
DPA3208-OH	OVERHAUL KIT
DPA3208-OHS	OVERHAUL KIT, SUPER
DPA3208-PM	PUMP MOUNTING KIT
<p>*All manufacturers names, numbers, symbols and descriptions are used for reference purpose only and do not imply that any part listed is the product of these manufacturers.</p>	